

TELECRANE NZ LTD

Notes for programming F25-10d remote systems to operate a twin hoist gantry crane.

You will require F25 series CD ROM with data cable.

Program R1 and R2 to toggle for Twin Hoist operation

How to operate the transmitter:

- *Press auxiliary button #1 once to latch in hoist & trolley A, press button #1 a second time to disengage hoist/trolley A.*
- *Use auxiliary button #2 for hoist B in the same manor*
- *Press both buttons 1 and 2 once each to have both A+B hoists & trolleys working simultaneously.*